


Double-Action Hinge (DB-1118 / Stainless Steel)

Torque Can Be Adjusted

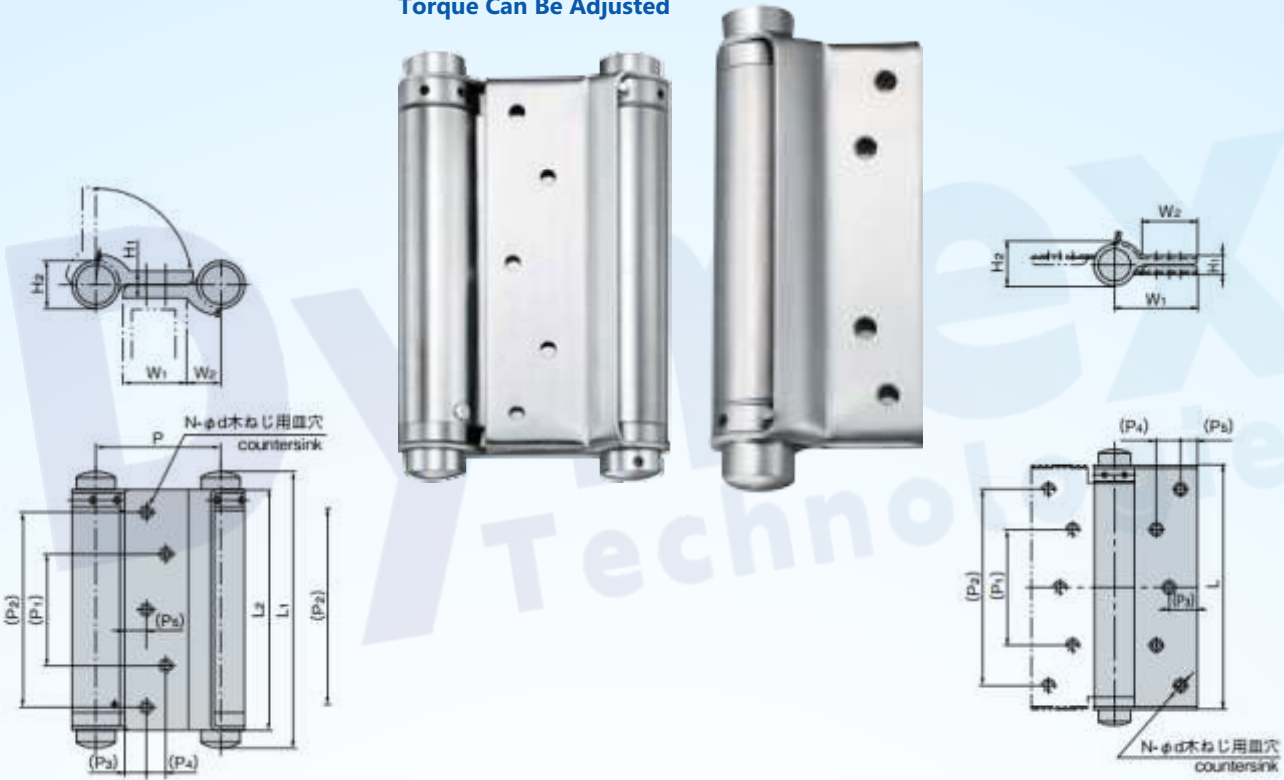


● B-1118 dimensional drawing (for both-side open type)

● B-1118-H dimensional drawing (for one-side open type)


| Product No. | L ₁ | L ₂ | W ₁ | W ₂ | H ₁ | H ₂ | P | (P ₁) | (P ₂) | (P ₃) | (P ₄) | (P ₅) | N-ød | Door Mass When Using 2 pcs Vertically (kg) | Product Mass (g) |
|-------------|----------------|----------------|----------------|----------------|----------------|----------------|------|-------------------|-------------------|-------------------|-------------------|-------------------|--------|--|------------------|
| DB-1118-1 | 170 | 152 | 35 | 16.5 | 13 | 25 | 70 | 72 | 122 | 10 | 15.5 | 17.5 | 10-3.8 | 30 | 1,100 |
| DB-1118-2 | 144 | 127 | 32 | 15.5 | | | 64 | 58 | 102 | 11 | 10 | 9.5 | | 25 | 850 |
| DB-1118-3 | 120 | 101 | 23 | 16.5 | 11 | 22 | 53.5 | 45 | 78 | 8.5 | 5.5 | 8-3.5 | 8-3.5 | 15 | 570 |
| DB-1118-4 | 97 | 77 | 21 | 14 | | | 51.5 | 34 | 56 | 7.5 | 8 | | | 10 | 440 |

| Product No. | Remarks | L ₁ | W ₁ | W ₂ | H ₁ | H ₂ | P ₁ | P ₂ | P ₃ | P ₄ | P ₅ | N-ød | Door Mass When Using 2 pcs Vertically (kg) | Product Mass (g) |
|-------------|--------------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|--------|--|------------------|
| DB-1118-H-1 | One-side open type | 152.5 | 52 | 35 | 13.5 | 25 | 73 | 123 | 17.5 | 15.5 | 10 | 10-3.8 | 30 | 600 |
| DB-1118-H-2 | One-side open type | 126.5 | 47.5 | 31 | 13.5 | 25 | 58 | 102 | 9.5 | 10 | 11 | | 25 | 500 |
| DB-1118-H-3 | One-side open type | 101.5 | 40 | 23 | 11.5 | 22 | 45.5 | 78.5 | | 5 | 13.5 | 8-3.5 | 18 | 250 |
| DB-1118-H-4 | One-side open type | 76.5 | 34.5 | 21 | 11.5 | 22 | 34 | 56 | | 8.5 | 7 | | 12 | 200 |


Application Example And Torque Changing Method

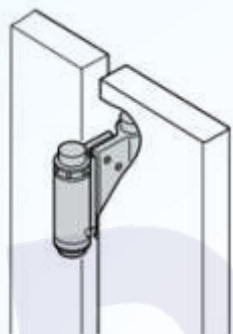


Application example

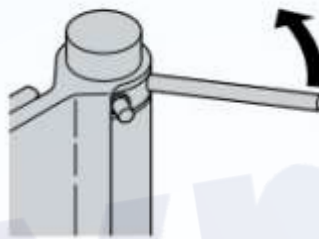

Torque changing method
(1. Insert the torque adjustment pin into the hole and rotate to the right)

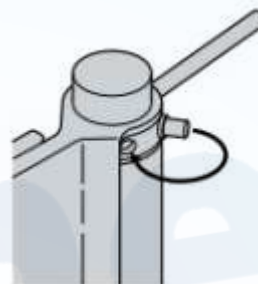

Torque changing method
(2. Remove the stopper and insert it into the desired torque hole.)

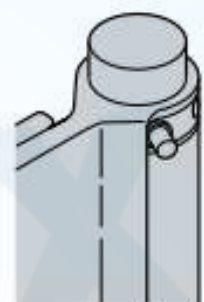

Torque changing method
(Finish by removing the torque adjustment pin)

Basic Specifications

- **Material** - Stainless Steel Plate (SUS304)
- **Mounting Hole** - Through Hole
- **Main Body Type** - Hinge
- **Surface Finish** - Hair line finish



DB-1118-1

